
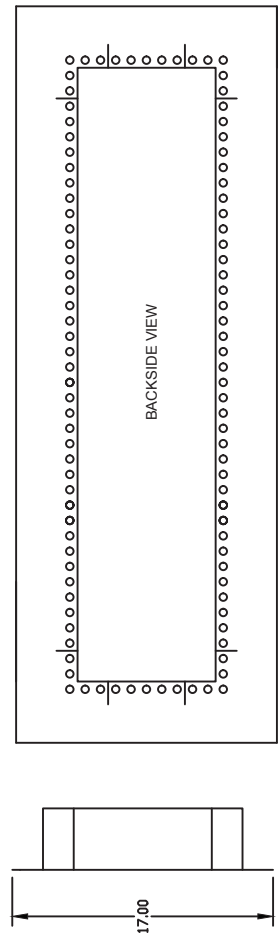
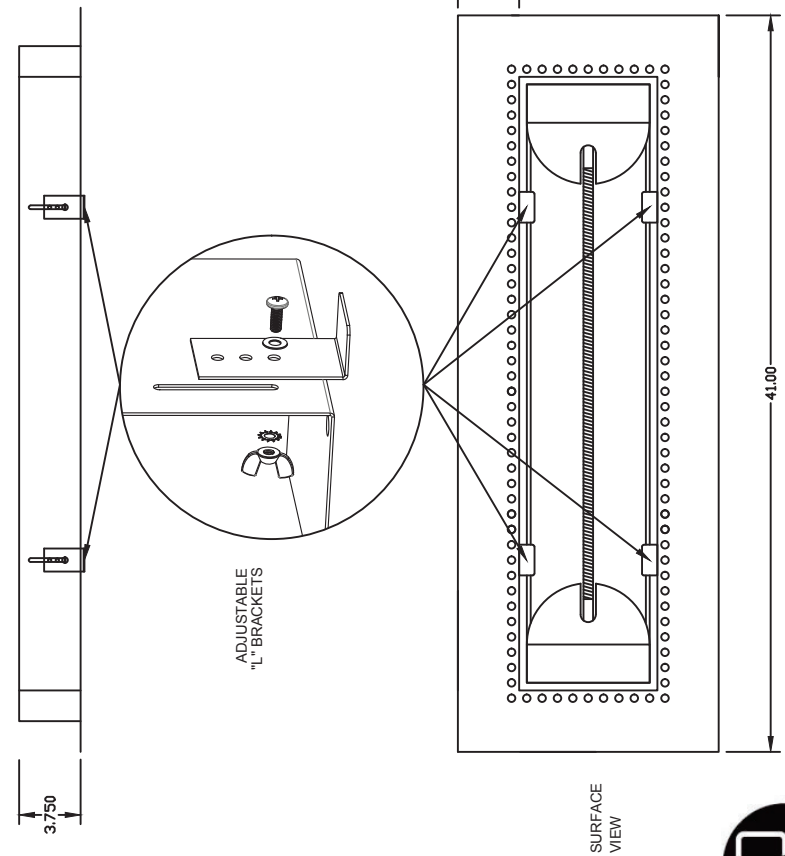
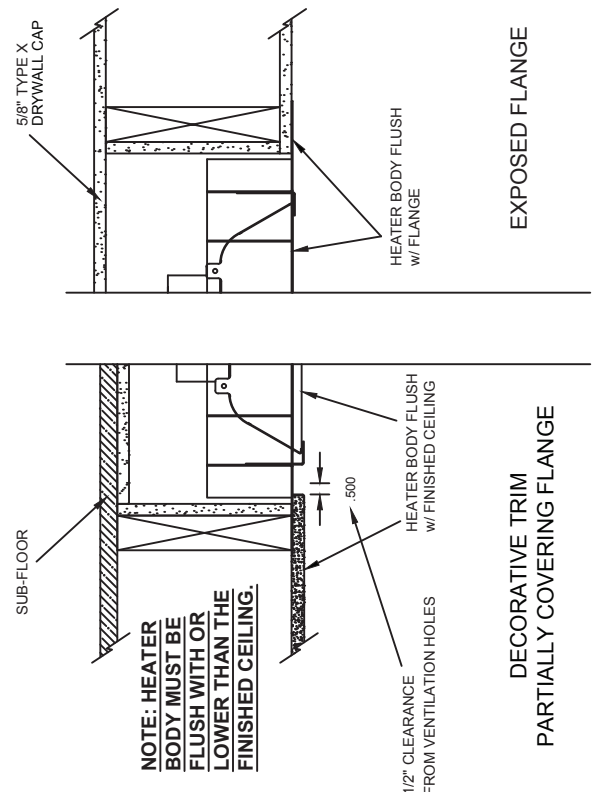


INSTALLATION TYPES

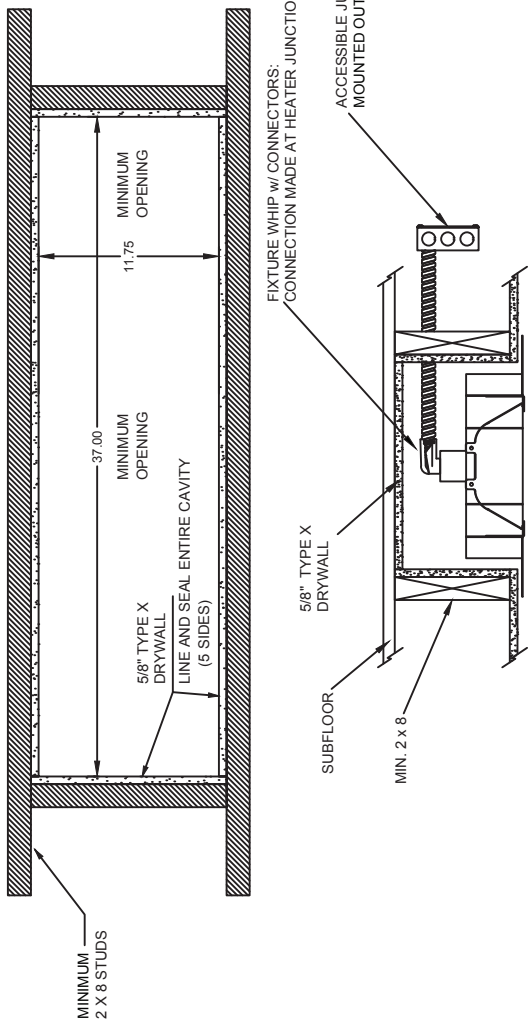

- ☒ Do not use Surface Mount Brackets.
- ☒ This Frame is ONLY to be used on a flat non-sloped ceiling.
- ☒ Heater Body must face straight down and be flush with the finished ceiling.
- ☒ Frame and Heater cannot be installed on a pitched angle.
- ☒ Accessible Junction Box must be installed outside of sealed drywall pocket.
- ☒ Must use 5/8" type "X" drywall.
- ☒ Must use supplied 4 foot Hi-Temp Fixture Whip and Hi-Temp Ceramic Wire Nuts.
- ☒ Please contact factory for longer length Hi-Temp Fixture Whips available for purchase.
- ☒ Discard Surface Mounting Brackets provided with Heater and use "L" Brackets.
- ☒ Use Licensed Electrician ONLY.

After 4 hours of continuous use, a 15 minute cool down period is recommended for maximum heater longevity. See controls brochure for timer options.

WARNINGS:



NOTES:

- ☒ Heater suspends (Gravity) by resting on adjustable "L" Brackets in flush mount fixture.
- ☒ Mounting holes on Surface Flange to be determined and drilled by Contractor/Installer.
- ☒ Coil excess flex into heater cavity.

INFRA TECH
344 W 157th Street
Gardena, California 90248
Phone: (310) 354-1250
www.infratech-usa.com
Fax: (310) 523-3674

ITEM #:	18-2295	MATERIAL:	304 S.S. #4 FINISH
DESCRIPTION:	W-33 FLUSH MOUNT FRAME (FOR USE WITH 33" HEATERS)		
NOTES:	SUPPLIED w/ HI-TEMP FIXTURE WHIP		
DATE:	Dec. 16, 2019	SCALE:	N/A
DRAWN BY:	CL		