
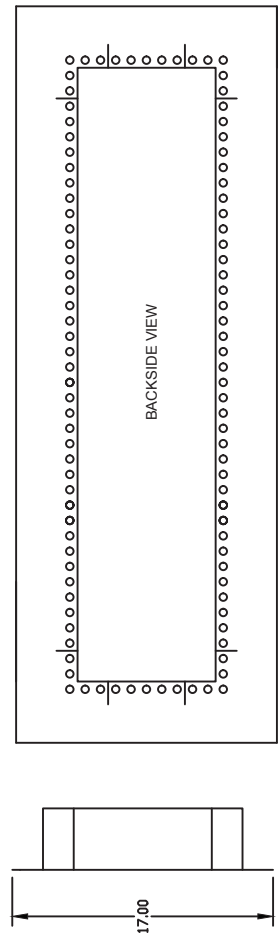
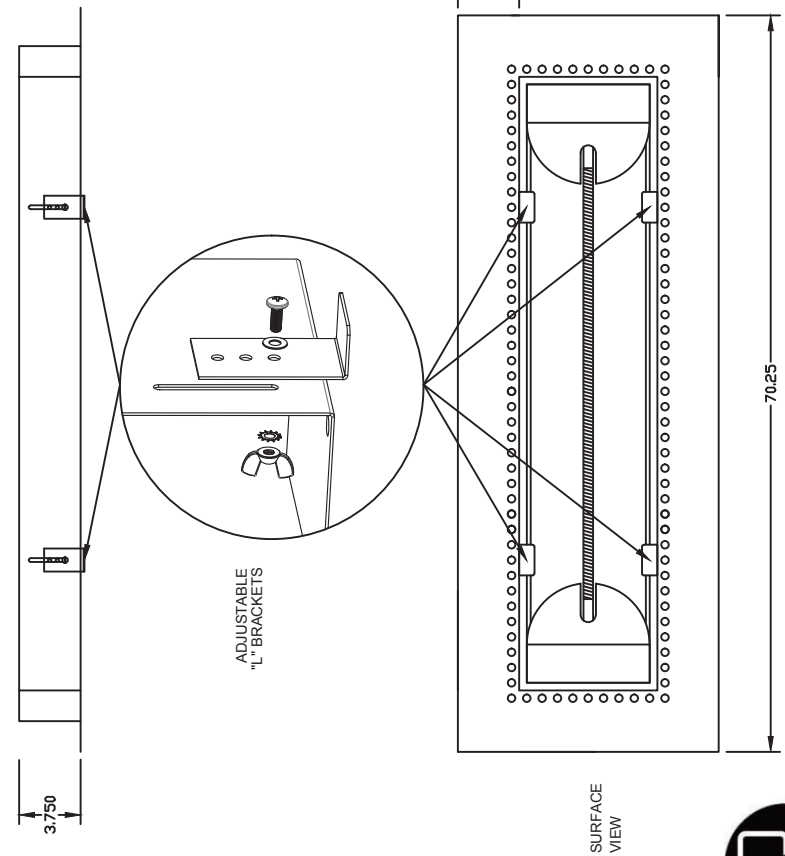
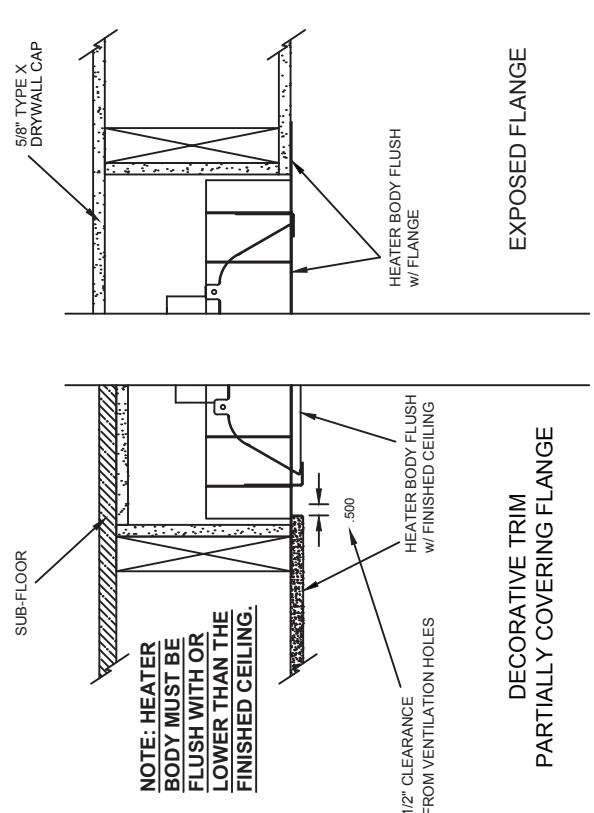


INSTALLATION TYPES

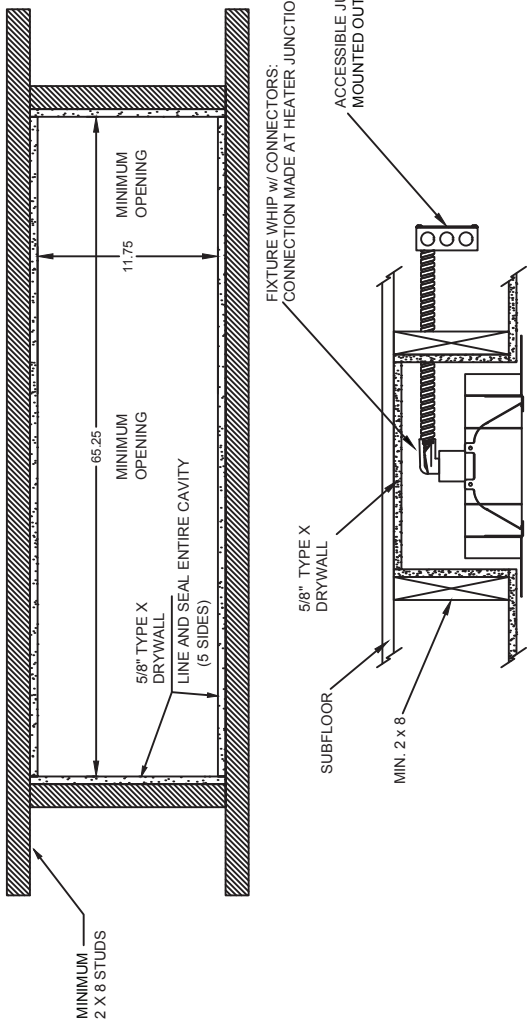

- ☒ Do not use Surface Mount Brackets.
- ☒ This Frame is ONLY to be used on a flat non-sloped ceiling.
- ☒ Heater Body must face straight down and be flush with the finished ceiling.
- ☒ Frame and Heater cannot be installed on a pitched angle.
- ☒ Accessible Junction Box must be installed outside of sealed drywall pocket.
- ☒ Must use 5/8" type "X" drywall.
- ☒ Must use supplied 4 foot Hi-Temp Fixture Whip and Hi-Temp Ceramic Wire Nuts.
- ☒ Please contact factory for longer length Hi-Temp Fixture Whips available for purchase.
- ☒ Discard Surface Mounting Brackets provided with Heater and use "L" Brackets.
- ☒ Use Licensed Electrician ONLY.
- ☒ Heater suspends (Gravity) by resting on adjustable "L" Brackets in flush mount fixture.
- ☒ Mounting holes on Surface Flange to be determined and drilled by Contractor/Installer.
- ☒ Coil excess flex into heater cavity.

WARNINGS:
After 4 hours of continuous use, a 15 minute cool down period is recommended for maximum heater longevity. See controls brochure for timer options.

INFRA TECH www.infratech-usa.com		344 W 157th Street Gardena, California 90248 Phone: (310) 354-1250 Fax: (310) 523-3674
ITEM #:	18-2305	MATERIAL: 304 S.S. #4 FINISH
DESCRIPTION: W-61 FLUSH MOUNT FRAME (FOR USE WITH 61 1/4" HEATERS)		
NOTES: SUPPLIED w/ HI-TEMP FIXTURE WHIP		
DATE:	Dec. 16, 2019	DRAWN BY: CL

